



NOTE : If Ignition wire is not used please connect it with (Batt+) Positive terminal of Battery.